



*Create the desired texture*  
by smoothing the second layer with  
a sponge, by pricking with a brush  
or flattening with a trowel.

**TexNov**

*Acrylic Coatings  
Manufacturer*



839 Joseph-Louis-Mathieu  
Sherbrooke J1R 0X3  
**1 877 316-6388**  
[www.texnov.com](http://www.texnov.com)  
[info@texnov.com](mailto:info@texnov.com)

**TexNov**

**TexBright**

Concrete look



*A place of life  
purified.*

*Dare to play with  
natural materials  
and different textures,  
and bring relief and life  
to your decoration.*



# Procedure

## 1 Preparation

- Clean stubborn stains with *Texnov's Surface Preparer* (on masonry) or with a damp cloth (on gypsum)

## 2 Application

- Mix the two components with a paint mixer
- Apply a first coat
- Wait 2 hours of drying
- Apply the second coat
- Within 15 minutes, scrub on the surface with a wet trowel or a damp sponge


## 3 Sealing

- Apply a coat of sealant *MET-30* or *WRS-40* clear for wall accents




## Necessary tools

- *TexNov's TexBright*
- *TexNov's* surface preparer (on masonry)
- Sealant *MET-30* or *WRS-40*
- Sponge
- Empty and clean seal
- Plasterer's trowel
- Paint mixer

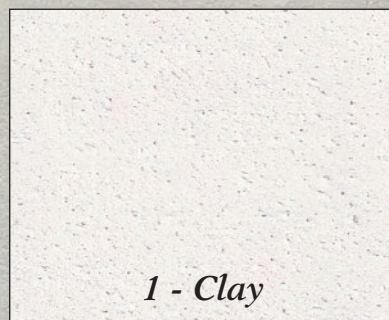


1 - Clay

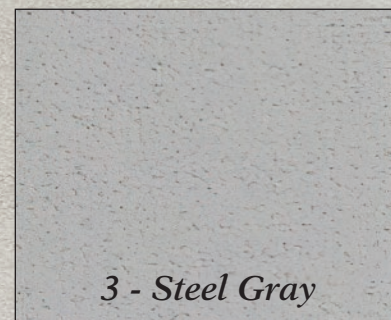

3 - Steel Gray



5 - Pearl gray

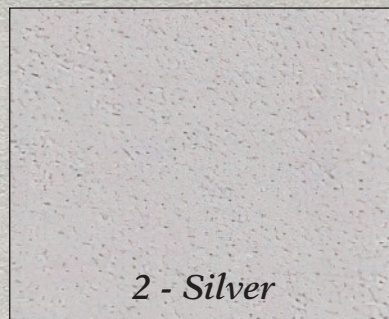

2 - Silver



4 - Ash earth



6 - Slate